

FORD TRANSIT REAR GRAB HANDLE KIT (KIT # : 11F00-XX)

INSTALLATION INSTRUCTIONS



NOTE: Color of the actual part may vary from the pictures included.

PARTS INCLUDED :

1. Rear Grab Handle

(Qty = 2) [Length = 35.150 inches]



2.M8 Plus Nut

(Qty = 2)



3.M10 Bolt

(Qty = 2)



4.Flat/Fender Washer for M10 Bolts

(Qty = 2)



5.Split Lock Washer for M10 Bolts

(Qty = 2)



6.M8 Bolt

(Qty = 2)



7.Flat/Fender Washer for M8 Bolts

(Qty = 2)



8.Split Lock Washer for M8 Bolts

(Qty = 2)



INSTRUCTIONS:

Note: The below instructions are for both Driver and Passenger side Grab Handles.

1. Align Legend's grab handle to the upper fastening point depending upon the roof-height of the van. These fastening points are highlighted by red colored circles in the image below.



"Low Roof-Height"




"Medium Roof-Height"



"High Roof-Height"

2. Fasten the handle in van using the hardware provided, in the order as shown below.
NOTE : Do not fasten the M10 bolt completely. Allow some room for the movement of grab handle to carryout the following steps.

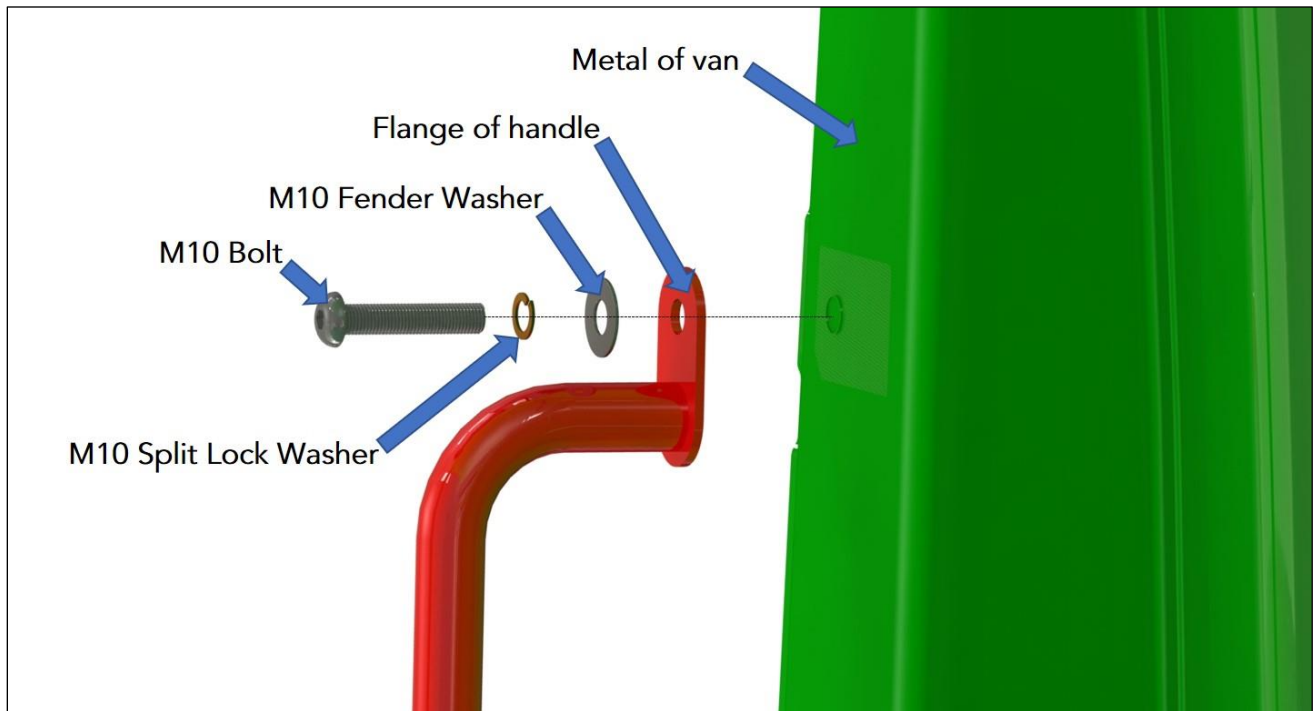


"Hardware to be used at the Upper Fastening Point"

3. Swing the handle to align the hole on the lower flange of the grab handle with the slot highlighted in red in the image below. Mark the location of the hole along the slot.
NOTE : Approximate distance of the centre of hole from the upper edge of the slot is 0.420 inches
4. Swing the handle out of the way and drill a hole of 0.500 inches diameter at the location marked in Step # 3 (rough location is highlighted in yellow), as instructed in the notes below.
NOTE : Use of a drill stopper is recommended to restrict the drill depth to 1 inch.



"Identification of slot to be used as Lower Fastening Point"

5. Install the plus nut in the hole drilled in step # 4.
6. Align the grab handle with plus nut (lower fastening point) and fasten it using the hardware provided, in the order as shown below.

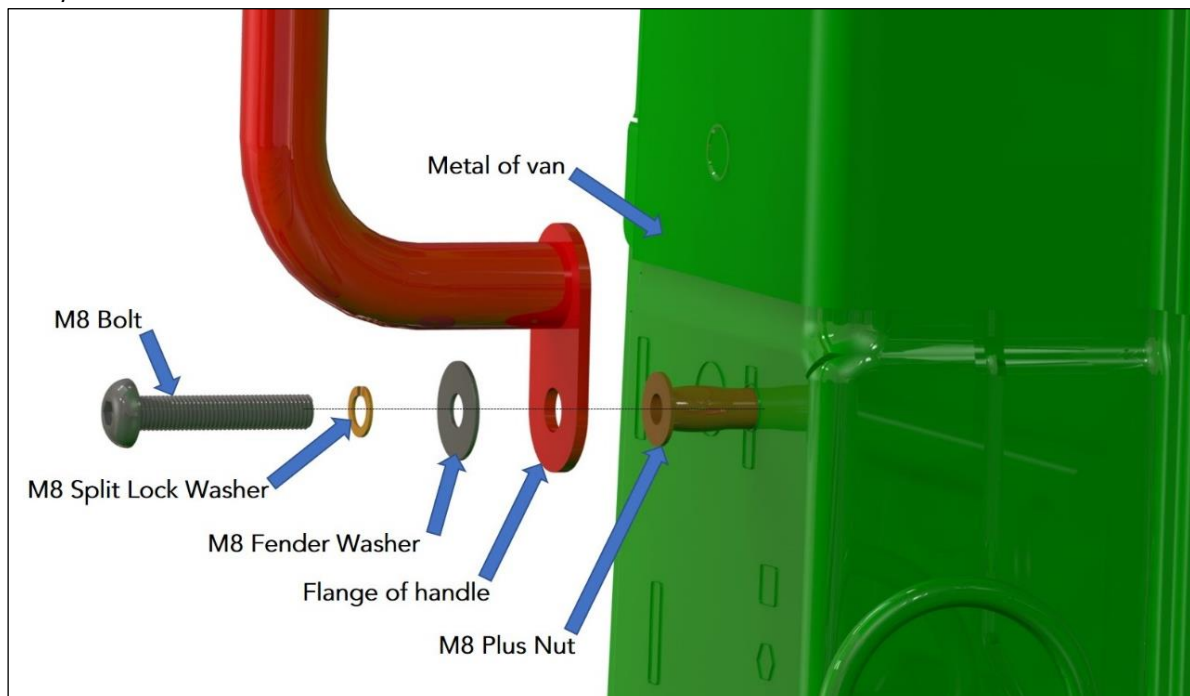

"Hardware to be used at the Lower Fastening Point"

7. The hardware installed at the upper fastening point in step # 2, can now be tightly fastened.
8. Following the steps from 1 to 7 again, to install the second grab handle of the kit on the other side of the vehicle.